


060 - Body Sheet Metal Except Doors/300 - Fenders

DESCRIPTION

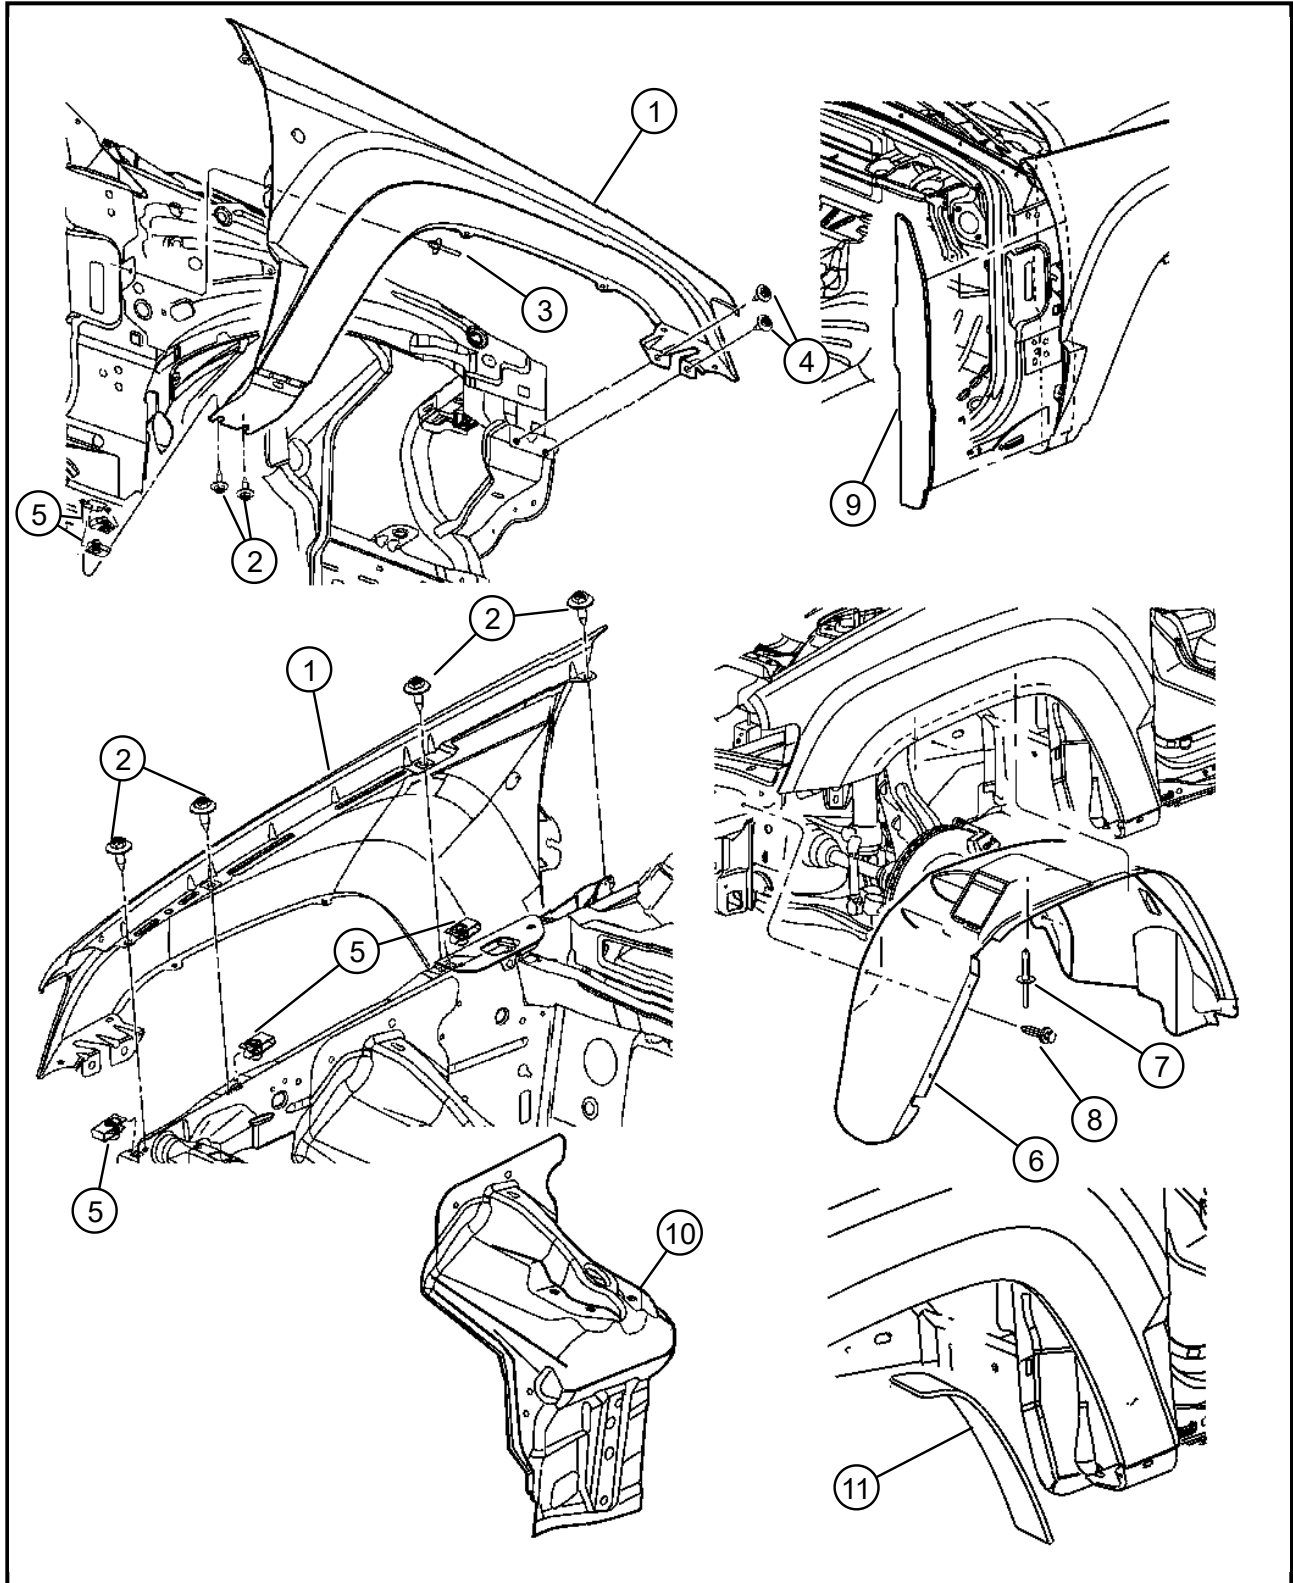

Item	Description	Part Number	Qty	Supersedence	Tech Tip	Engine	Trans	Line	Body
1	FENDER, Front								
	Right	55396294AC	1	No					
	Left	55396295AC	1	No					
2	BOLT AND CONED WASHER, Hex Head, M6x20x20	06100286	4	No					
3	STUD, Double Ended, [M6x1.00x57.00]								
4	SCREW AND WASHER, Self Tapping, M6x1x22	06505903AA	4	No					
5	NUT, U Multi Thread, M6 x 1.00								
6	LINER, Fender Side								
	Right	55079096AA	1	No					
	Left	55079097AA	1	No					
7	RIVET, M6.25x28								
		06500911	4	No					
		06500911	6	No					
8	RIVET, M6.3x37.40	34201621	4	No					
9	SILENCER, Cowl Side To Fender	55196996AC	2	No					
10	SUPPORT, Suspension								
	Right	05161876AE	1	Yes					
	SUPPORT	05161876AF	1	Yes					
	Left	05161877AE	1	No					
11	SILENCER, Wheelhouse, Stuffer	55197168AA	2	No					

Note: The item number that is listed in negative(-) indicates there is no illustration available.